

USER MANUAL



MEDIUM 2

REF : PFDIM2

INSTRUCTIONS OF USE

Please read this manual carefully as well as any tag stuck onto the machine and make sure you understand the meaning before use.

Store these instructions near the diffuser for future reference.

Make sure that each person who will use this product has carefully read this manual.

Be aware that using a tool by following the instructions manual do not guarantee the elimination of every risk factor.

Proceed with care.

Don't use this tool if you have doubts about the correct and safe way to proceed.

GLOBAL SECURITY INSTRUCTIONS

WARNING Please, read the entirety of security rules and instructions.

The non-respect of those rules and instructions may result in a risk of electric shock, fire and/or cause serious injuries.

Keep this security rules and instructions manual for future reference.

Don't use the diffuser in a humid environment and under excessive heat. Prohibition of using the diffuser in stormy weather.

Don't use the diffuser in a room that has no ventilation or no airflow.

Don't fill the diffuser with dangerous or toxic liquids.

Please set the time-slot and the diffusion time in a reasonable way.

Please keep the diffuser in a vertical position.

Make sure the diffuser is set on a plane and stable surface.

Don't sit on the diffuser.

Please clean and maintain the diffuser regularly.

Damaged power cords need to be replaced with a cable that has the same electric properties as the previous one to avoid any risk.

It is forbidden to open the diffuser to repare it. Please contact a professionnal technical assistant.


Please unplug the power cord before any maintenance.

CONTENTS

CONTENT OF THE BOX	4
TECHNICAL CHARACTERISTICS	4
SETUP & OPERATION	5
APPLICATION	6
TIMER	8
MAINTENANCE	10
GUARANTEE	10
TECHNICAL ASSISTANCE	10

CONTENU DE LA BOITE

NAME	QUANTITY
MEDIUM 2 Diffuser	1
500ML Reservoir	1
Power suppy	1
User manual	1
Screws	2
Pegs	2
Adaptator	1
Сар	1
Keys	2

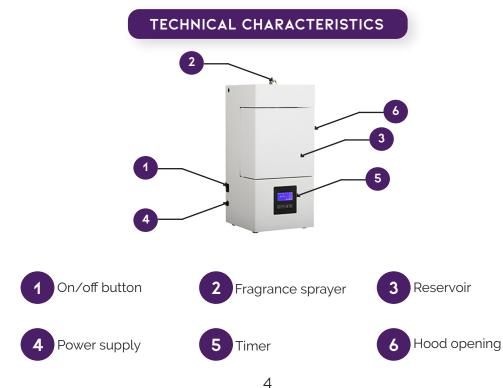

Area of effect : up to 800M ²	Weight : 4.96KG
Diffusing volume : 200 to 2000M ³	Power : 12.6W
Diffusion duration : 5 to 900 seconds	Supply : 12V
Reservoir capacity : 500ML	Decibels : ≤45DBA
Consumption : 0,37ML/MIN	Material : Metal
Dimensions : 16.5x16.7x36CM	Color : White

SETUP & OPERATION


- 1. Unlock the diffuser with the key, press the push-button onto the side of the device. Twist off the reservoir from its location.
- 2. Fill the reservoir up with a perfume of your choice up to a maximum that is indicated by the last dent of the scale.
- 3. Put the reservoir back in the diffuser, close the hood by pressing.
- 4. Put the diffuser on a plane and stable surface or hung it on the wall.
- 5. Plug the diffuser into an electrical outlet. The diffuser emits a sound signal.
- 6. Download the AromaLink application on your mobile and follow the instructions to start the diffuser up.

APPLICATION

DOWNLOAD THE AROMALINK APPLICATION

CONNECTION VIA BLUETOOTH

- 1. Open the application
- 2. Click on the "Bluetooth" button.
- 3. The diffusers in your proximity will appear, select your product.
- 4. You are now connected to the diffuser.

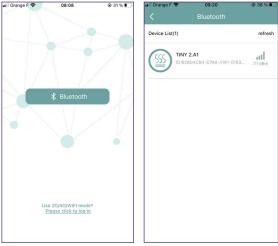

ANDROÏD

IOS

SETTINGS

- 5. Click on the "Set" button.
- 6. Select the days you want your diffuser to be working.
- 7. Five programmable time slots are available for the same day. Click on the "pen" icon to change the settings.


2.A1 🖍
Ved Thur Fri) Sat
ïme On/Off
econd
120s
120s
00:00 120s
00:00 120s
00:00
Save

TIME SLOTS AND DIFFUSION DURATION

- 8. Schedule the activation of the diffuser with "Start Time" and the deactivation with "End Time".
- 9. Modify the diffusion and pause duration as needed. The diffusion duration "Work(s)" and the pause duration "Pause(s)".
- 10. Click on "Save" to save the settings.
- 11. To add other diffusion time slots, redo the previous steps with an available time slot.
- 12. To confirm click on "Save".

STARTING UP

- 13. Press the "On/Off" button to turn on the diffuser. The diffuser emits a sound signal.
- 14. The diffuser will automatically activates depending on your programming choices.

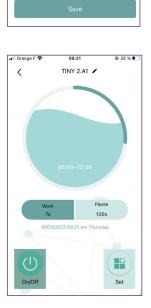

I Grange # 06:10 0:29 % I time setting Sun Mon Tues Wed The Fig. 60:00 End Time 00:00 End Time Work(s) 10 Pause(s) 120

On/Off

<

LEGEND :

- to move the cursor
 to change the number
 "ENT" to validate the selection
 "BACK" to return
- ST = starting time of the diffusion TO = ending time of the diffusion W = duration of the diffusion P = pause of the diffusion

Note : after a few seconds without touching any buttons, the Timer will go back to the main menu, while saving the last modifications.

TURN ON THE DIFFUSER WITH THE EXTERNAL ON/OFF SWITCH.

1. You can also let the switch permanently remain in the ON position and use the **"ENT"** button to turn ON and OFF the device by pressing it for 3 seconds.

SETTING THE LOCAL TIME

2. Press simultaneously the ► and ▲ buttons, when the cursor is flashing you can set the time. Press « ENT » to confirm.

PROGRAMING DAYS AND TIME SLOTS OF DIFFUSION

- 3. Press the ► button to configure the time slots of diffusion for each day of the week.
- 4. Use the \blacktriangle button to change the day, then press "ENT" to validate.
- 5. Select the program to define between 1 and 5, then press the ► button. You can set 5 different diffusion programs.
- 6. With the ► and ▲ buttons, select the diffusion start time (ST) and the diffusion end time (TO).
- 7. If you don't want the diffuser to work for multiple days straight, each day turn it OFF, program the start time and end time to zero.

DEFINING THE WORKING (W) AND PAUSE (P) TIME

8. With the ► and ▲ buttons, specify the diffusion time (W) and the pause time (P). Press **"ENT"** to validate.

*Working and pause times must be greater than 5 seconds. *The start time (ST) must be earlier than the end time (TO).

TURNING ON AND OFF THE FAN AND THE NEGATIVE ANION

9. Press the "BACK" button for 5 seconds to turn on or off the fan.

TURNING ON THE SCREEN

10. If you don't manipulate the Timer for 15 seconds, the screen will shut off. Press any button to turn it back on.

SYSTEM RESETTING

- 11. If you want to reset the diffuser's data, press simultaneously the **"BACK**" and
 - ▶ buttons, then press "yes".

MAINTENANCE

To change the fragrance, empty the reservoir, then wash it gently with our Cleaner Fluid or with 70° denatured alcohol. For this step, it is recommanded to use gloves, in order to avoid any contact between the alcohol and your skin.

The fragrance is a greasy product, a water washing isn't enough and is not recommended.

Once the reservoir emptied and cleaned, you can now refill it with the fragrance of your chosing.



Your product is new and is guaranteed by the legal guarantee of conformity (Articles L 217-4 and followings of the Consumption Code). This guarantee do not cover defects or damages due to a bad installation, an incorrect usage or the normal wear and tear.

In case of non-compliance, during the 2 years after delivery date, you can obtain the reparation or the replacement of your product, or failing, the reimbursement (if the reparation or the replacement is impossible or can not be done before the one-month mark preceeding the treatment of your demand, you can return the product and be refunded or keep it and be partially refunded).

TECHNICAL ASSISTANCE

You encounter some difficulties ? Contact the technical support from Mondays to Thursdays between 08:30 and 12:30 and between 14:00 and 18:00, and on Fridays between 8:30am and 12:00 (UTC+02:00 form the last Sunday of March to the last Sunday of October, and UTC+01:00 the rest of the year)

10



sav@premiumfragrances.eu







Environmental protection

This symbol affixed on the product means that it's treatment as a waste is subject to the regulation concerning waste electrical and electronic equipment.

This unit can not be treated as a household waste with no exceptions, and has to be specifically collected. Take-back and collecting systems are made available by local authorities (dump) and distributors. By leading your device after its lifecycle to the recycling system, you are contributing to protect the environment and prevent harmful effects for your health.

CE

11



PREMIUM FRAGRANCES CREATE SCENTS EXPERIENCES

PREMIUM FACTORY SAS – 1 Route Neuve, 71710 MONTCENIS – FRANCE Office +33 805 69 13 27 | info@premiumfactory.eu | www.premiumfactory.eu | www.premiumfragrances.eu S.A.S. with capital of 40,000 € | SIRET / EORI 84070379700018 | NAF2899B | TVA / VAT FR47840703797